

Software Update Instructions for H16-AIP (applicable for H16 series all models)

1. Remove the 8 screws (4 on each side) in the yellow-marked area, then you can take off the top cover of the H16-AIP.



 
 
2. Copy the software update file to a USB flash drive. Make sure the file is placed in the **root directory (top level)** of the USB drive.

Note: **The USB flash drive must not exceed 32GB. Format as FAT32 with 4KB allocation unit size**


3. Power on the H16-AIP. When the startup screen appears, press the MENU button on the remote control.




4. Insert the USB flash drive into the USB A port of the H16-AIP.

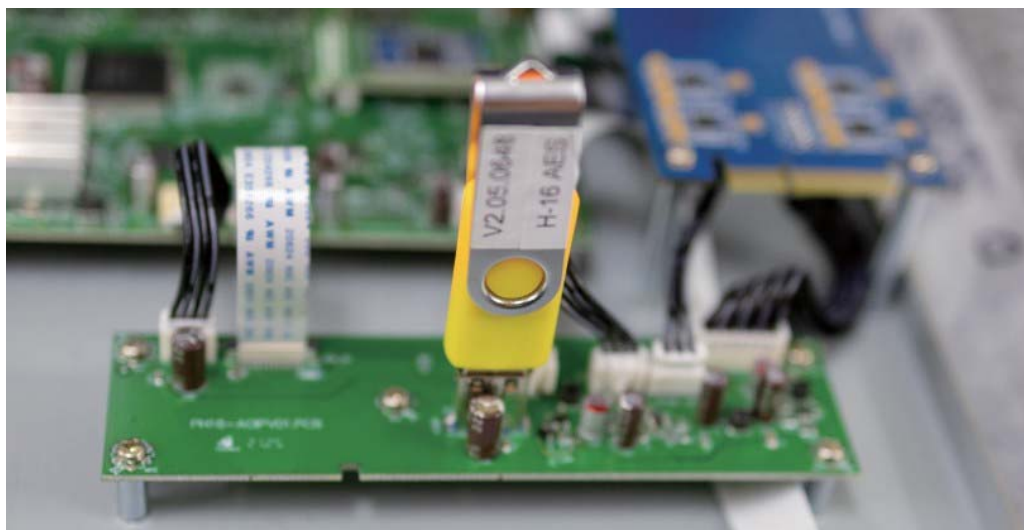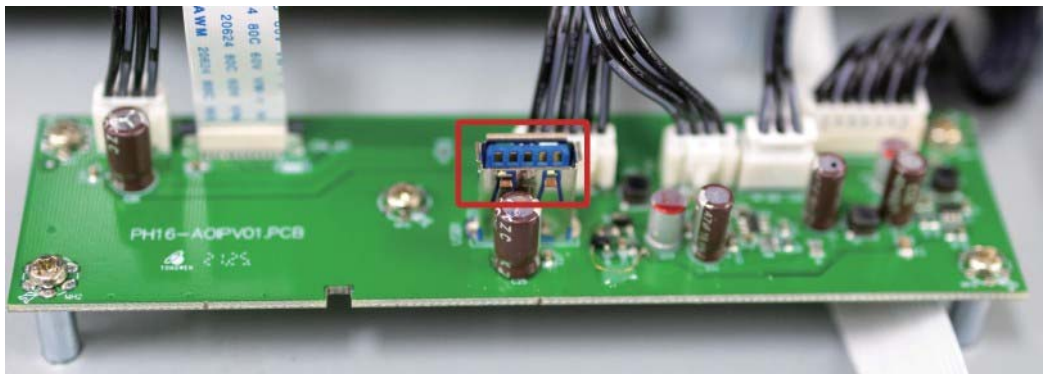

 5. In the MENU, go to SET UP → About.

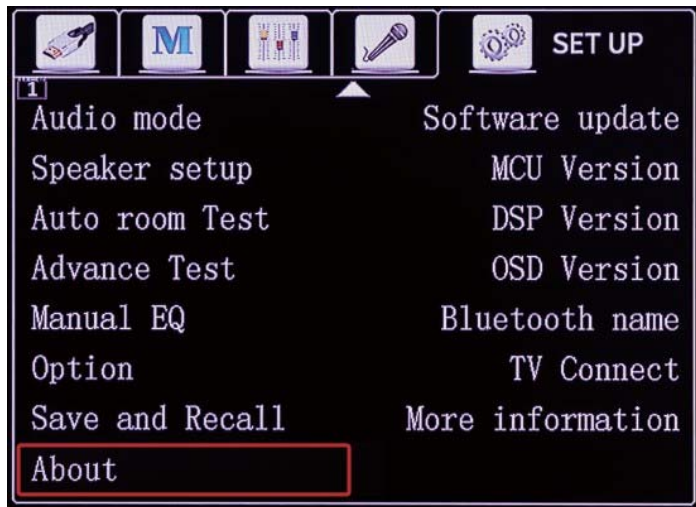

 6. In the About menu, select Software Update, press OK on the remote control, and then choose YES to confirm.

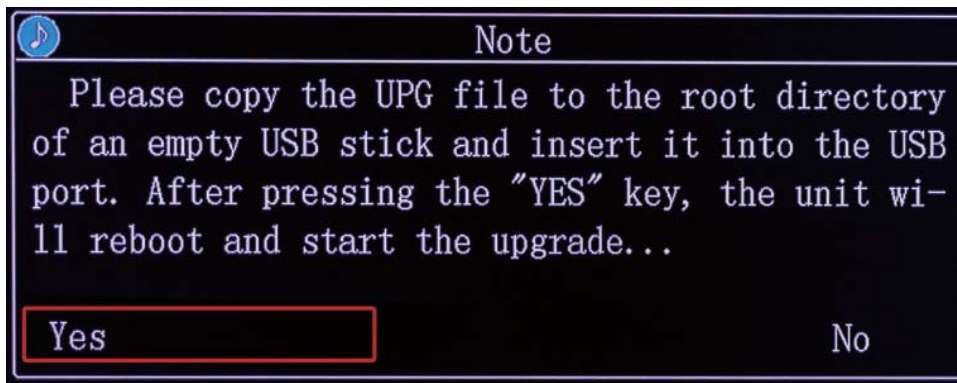

7. Wait for the update process to complete. This will take approximately 3–5 minutes. Once the firmware update is fully completed, the unit will automatically shut down, and the front panel LED indicator will turn red. After the indicator turns red, please press the power on again to turn the unit on.
8. Re-enter the About → Software Update menu to confirm that the version number has been

